

# NEBRA

Nebra HNT Indoor Hotspot Miner

GET STARTED WITH **NEBRA HNT**  
INDOOR HELIUM MINER

## SETUP GUIDE



[nebra.io/apple](https://nebra.io/apple)

[nebra.io/google](https://nebra.io/google)




- 1 Download the Helium or Nebra app and create or restore a Helium wallet




- 2 Screw the included antennas into the connectors on the hotspot. For extra help and support visit our detailed setup guides at [nebra.io/hnt](https://nebra.io/hnt)


OR

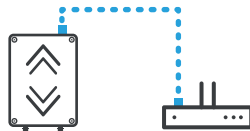


- 3 If you are using a wired connection, plug an Ethernet cable in between a router and the Ethernet port on the hotspot

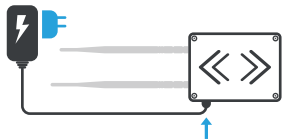

- 4 Assemble the appropriate adapter for your country onto the universal power supply, plug into mains power and insert power cable into the hotspot

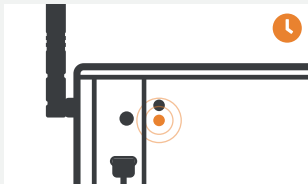

- 5 When the hotspot is powered up, the lower orange LED will be on. It will take up to 5 minutes to configure after the first boot

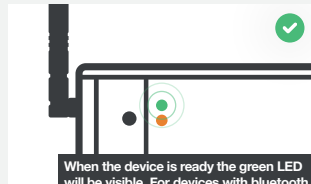

- 6 When the device is ready the green LED will be visible. For devices with bluetooth, a slow flashing indicates the hotspot is ready for pairing. Press and hold the button for 10 seconds to activate pairing

FOR MORE DETAILED SETUP GUIDES VISIT [NEBRA.IO/HNT](https://NEBRA.IO/HNT)

# WRITE DOWN YOUR RECOVERY PHRASE!

During account setup, you will be asked to write down 12 words that must be kept safe in order to recover or move accounts.

1

7

2

8

3

9

4

10

5

11

6

12